



CODESYS Control RTE V3

Manual

Version: 7.0

Template: templ_tecdoc_en_V1.0.docx

Filename: CODESYSControlRTEV3_Manual.docx

CONTENT

	Page
1 Overview	4
1.1 What is a real time extension?	4
1.1 The System in Details	5
2 Installation	6
2.1 Important steps of the Setup	6
3 The user interface	9
3.1 Remote PLC	9
3.2 PLC Configuration	10
3.2.1 The tab Startup	10
3.2.2 The tab Component Manager	11
3.2.3 The tab Application	11
3.2.4 The tab Logger	12
3.2.5 The tab Scheduler	12
3.2.6 The tab File	12
3.2.7 The tab Target	12
4 Available dynamic components	13
4.1 The hardware platform adaption	13
4.2 CmpSJACanDrv	13
4.3 CmpEt100Drv	13
4.4 CmpEt1000Drv	14
4.5 CmpRTL81x9Mpd	14
4.6 CmpRTL8169Mpd	14
4.7 CmpSercos3Master	14
4.8 CmpHilscherCIFX	14
4.9 CmpNetXCanDIDrv	15
4.10 CmpCX5000Mpd	15
5 Appendix	16
5.1 Appendix A: The registry entries used by the RTE	16
5.2 Appendix B: Real time behavior on special platforms	17
5.2.1 Check BIOS for suspicious settings	17
5.2.2 Check the settings in Windows	18
5.3 Appendix C: Methods to simply check the real time behavior	19
5.4 Appendix D: Examples for BIOS configurations	19
5.4.1 CELERON Device	19
5.4.1.1 ACPI Configuration	19
5.4.1.2 CPU Settings	20
5.4.1.3 Chipset Settings	20
5.4.1.4 Clock Configuration	21
5.4.1.5 USB Configuration	21
5.4.2 INTEL ATOM Device	22

5.4.2.1	ACPI Configuration	22
5.4.2.2	CPU Settings	23
5.4.2.3	Chipset Settings	23
5.4.2.4	Clock Configuration	24
5.4.2.5	USB Configuration	24
5.4.3	INTEL DUAL CORE Device	25
5.4.3.1	ACPI Configuration	25
5.4.3.2	CPU Settings	26
5.4.3.3	Chipset Settings	26
5.4.3.4	USB Configuration	27
5.4.4	More common hints on hardware configuration	27
5.5	Appendix E: Startup of a PROFIBUS Master by Hilscher CIFS 50-DP(M/S)	28
5.5.1	Installation of a Windows driver	28
5.5.2	Copy NetX firmware and NetX boot loader	28
5.5.3	Configure the RTE in "CODESYSControl.cfg"	28
5.5.4	Start runtime	29
5.5.5	Create CODESYS project with IO configuration	30
5.5.6	FAQ	33
5.5.6.1	If the fieldbus master is not green, how can I find the problem?	33
5.5.6.2	There are unresolved references	33
5.5.6.3	I've activated the Trace, but I do not see a new entry of the CmpHilscherCIFS component	33
	Bibliography	34
	Change History	35

1 Overview

CODESYS Control RTE is a softPLC system, a PLC in software, on Windows, which is programmable with CODESYS V3. Therefore a powerful PLC within the operating system based on a CODESYS runtime system is available.

Warning: For security reasons, controllers must not be accessible from the Internet under any circumstances. Specifically, the TCP/IP programming port of the controller (usually 1200 and 1210/1211, or the controller specific ports) must not be accessible.

The port numbers by default given by the system (however changeable per configuration!) are (here only the most important ones for the RTE):

- 1740..1743 UDP-Blocktreiber in Gateway und Laufzeitsystem.
- 11740..11743 TCP-Blocktreiber in Gateway und Laufzeitsystem.
- 1217 Gateway, zur Verbindung von CODESYS zum Gateway.
- 8080 Web-Server

In case Internet access is needed, a safe mechanism has to be used for connecting to the controller (e.g. VPN).


Within this document we assume the reader is familiar with the principles of a PLC and CODESYS. Only the specialities of the runtime system for the realtime extension on a Windows PC will be described.

1.1 What is a real time extension?

A real time system is defined to be deterministic with respect to its time response. This means, for example, if a routine is configured to be called within a certain time, this will happen within a deterministic interval. Otherwise the system fails. For a CODESYS PLC, this means if a task is configured to be a cyclic task, this cycle time has to be kept under any circumstances within constant tolerances.

Experience shows, this seems to be impossible using an operating system based on “pure” Windows NT. But the hardware of a PC is normally good enough to meet the demands of real time for most industrial applications. The real time extension for Windows is a Windows kernel mode driver that installs an interrupt service routine for a periodic interrupt, generated on demand by the PC hardware. This routine now is able to call the tasks, defined by a CODESYS application, within small intervals.

1.1 The System in Details

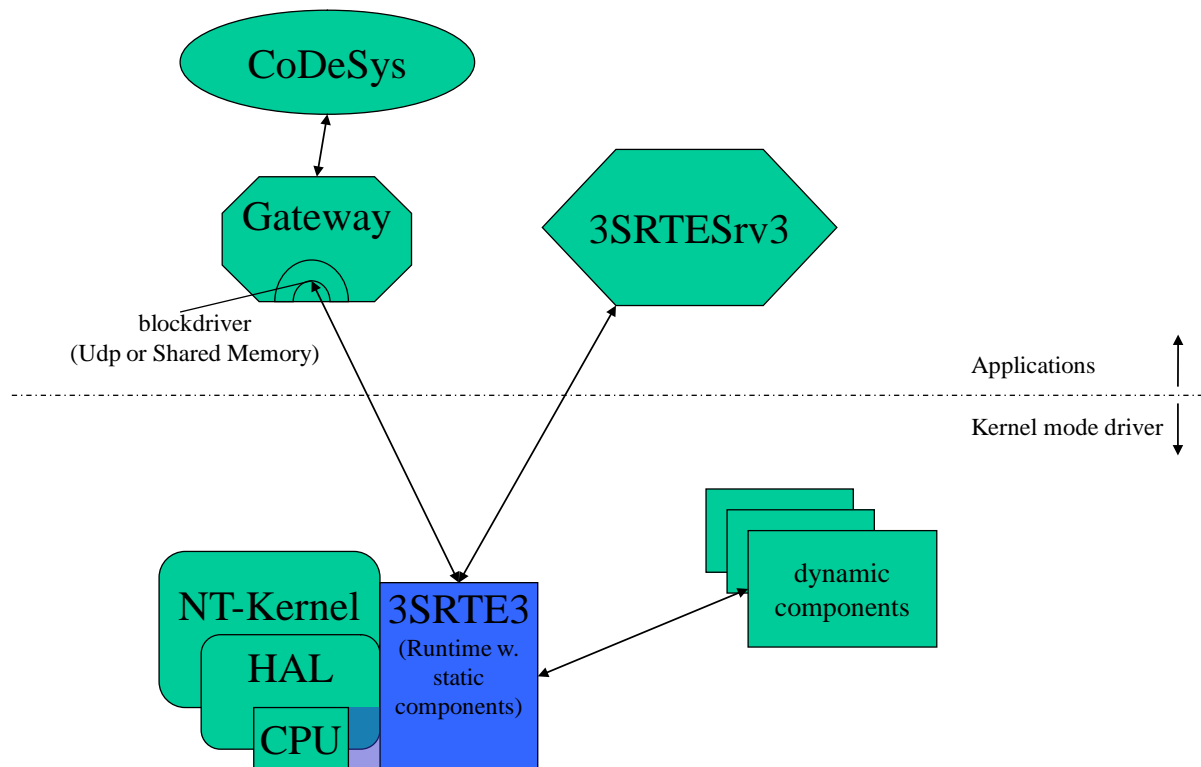

The kernel of the real time extension CODESYS Control RTE of 3S-Smart Software Solutions GmbH consists of a user mode system service and a kernel mode driver. The standard hardware of the PC is used to generate two interrupts within every millisecond and call the task scheduler. The first interrupt is used for calling tasks of its own and the second interrupt is used for calling the operating system. These tasks are interrupted once per millisecond from the operating system with a configurable time scheduling.

The dynamic components are inserted into a list in the configuration file of the runtime. These components provide the component interface to become a part of the CODESYS runtime. After being loaded by Windows, they can directly exchange data and calls with the runtime system.

It is not necessary to change the Windows kernel.

The RTE consists of runtime components that are loaded together with the RTE and some that are loaded "on demand". What dynamic components are available and what functionality they cover is described later in this document.

Note: The common properties of a 3S runtime system (means a 3S PLC) are described in the document „Runtime System Overview“ of 3S-Smart Software Solutions GmbH. There all variations and peculiarities of a runtime system are explained. So this technically detailed document is designed for development work.

2 Installation

The installation of CODESYS Control (respectively Softmotion depending on the type of the runtime system) RTE V3 - in the following just referred to as "RTE" - is done by the Setup. Depending on the type of delivery, the setup is available as a single exe-file or in an archive file or on a CD/DVD.

The Setup installs all available drivers provided with the delivery.

The Setup detects the type of platform on which the system gets installed, mainly it detects whether it is an (old, hardly any more used) AT-compatible platform, or a system basing on the newer APIC standard. Depending on the platform, another component gets inserted in the file CodesysControl.cfg.


As from version V3.5.3.0 it is also possible to run the RTE on an own (reserved and then not any longer usable by Windows) physical CPU core. In this case the Setup inserts the "AMP"-platform adaption:

```
Component.1=CmpDrvSchedulerAMP
```

(AMP means "asymmetric multiprocessor system")

Note: As from V3.5.4.0 the following is true: After an installation for AMP the RTE can get switched to APIC mode without the need of a re-installation. For this purpose you just have to replace entry `Component.1=CmpDrvSchedulerAMP` by `Component.1=CmpDrvSchedulerAPIC` in the file `CODESYSControl.cfg` (configuration file of the RTC). Additionally the boot entry „numproc=“ (see chap.2.1) should be deleted in order to get Windows rebooting with all kernels. (This is not necessary for test purposes.)


2.1 Important steps of the Setup

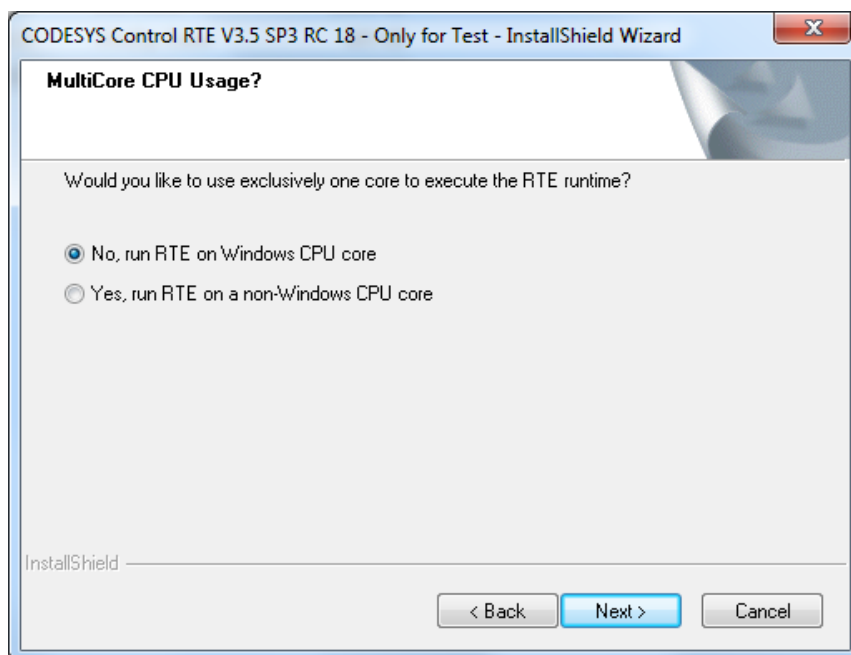

After you have started the setup and run through some standard steps, this dialog will appear on systems with multiple CPU kernels or on systems, where it is not clear whether there is only one or several CP kernels. At this time you must know whether the system indeed has multiple CPU kernels and whether you want to use one of them exclusively for the RTE. This kernel then will not any longer be available for Windows and thus the performance of Windows will be reduced. However, of course at the same time the performance and temporal precision of the RTE will be increased.

If you choose the option "No, run RTE on Windows CPU core", the RTE will be installed in a way, that - like before in all versions of the RTE - the tasks of the RTE will be executed together with those of Windows on the first kernel and will share that kernel with the operating system in fix time slices.

If you choose the option "Yes, run RTE on a non-Windows CPU core", the RTE will be installed in a way, that the RTE tasks will run on an own CPU core which is reserved for this purpose only. In this case subsequently the following dialog will appear:

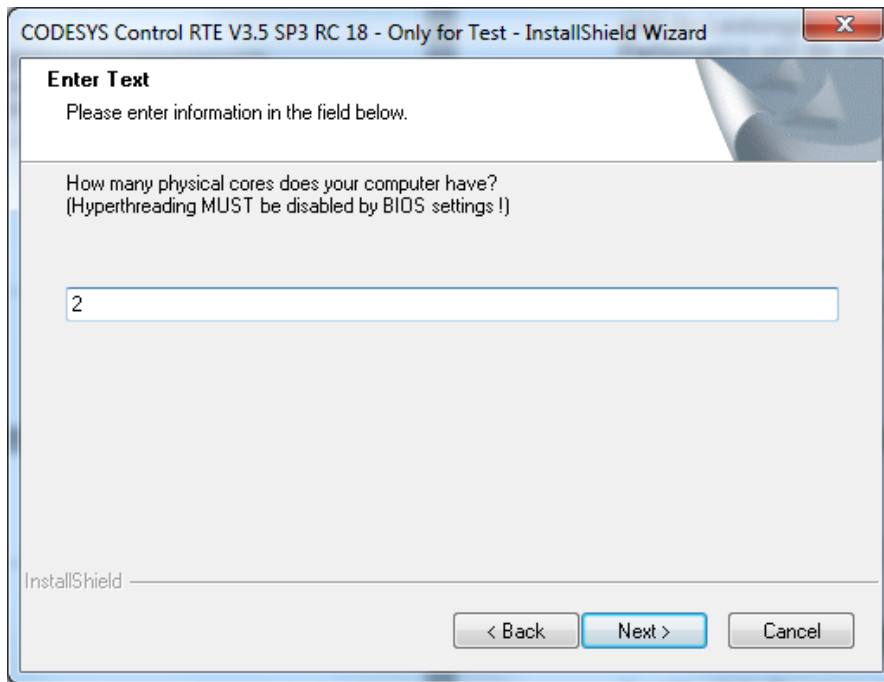

Here you must regard the following:

- The number (in the example shown above: "2") is only a proposal of the setup. It is not always possible to detect the exact number of physical CPU kernels available in your system. So now you should know that number. Regard also that a CPU kernel, reported by Windows, could be a "logical" CPU kernel, not suitable for running a realtime system. (These CPU kernels i.a. are known as "hyperthreading kernels".)
- The dialog makes you aware that you should deactivate any features like hyperthreading by all means via the system configuration, because experience has shown, that they have bad influence on the realtime behaviour.



Later on the Setup will try to reserve a CPU kernel for the RTE by modifying the start configuration of the system. In the subsequent dialog this modification will be indicated, however not yet done.

Only after the next dialog, where you get asked whether the boot configuration should be changed by the Setup, actually the modification of the system start configuration will be done.

The modifications are (see also the text in the previous setup dialog):

- Limitation of the number of CPU kernels available for Windows, via the boot option "numproc", to <number of physical kernels> - 1.
- Deactivation of the processor feature "Data Execution Prevention".
- Switching off the processor feature "physical address extension (PAE)".

Note: The processor features "Data Execution Prevention" and "PAE" not necessarily must be switched off. Just as well you can limit just the number of kernels for Windows by a manually defined start configuration. However 3S-Smart Software Solutions GmbH does not test such configurations!

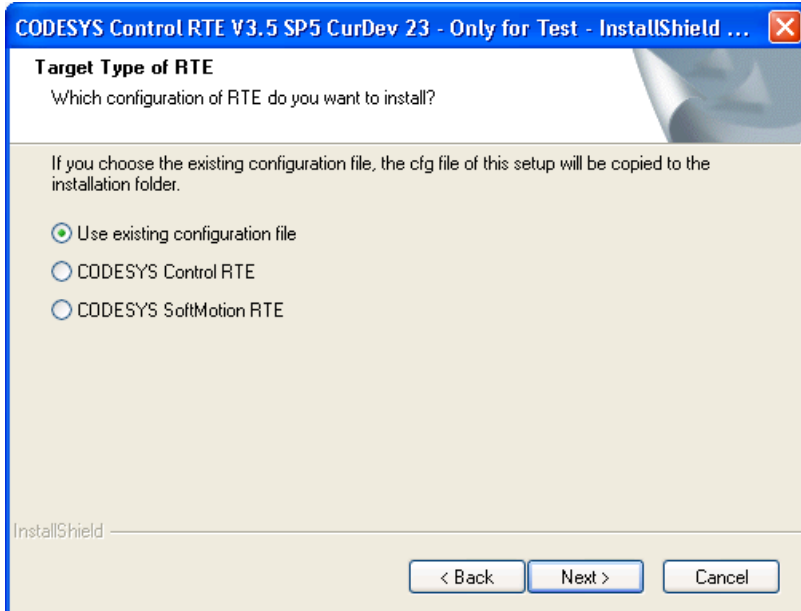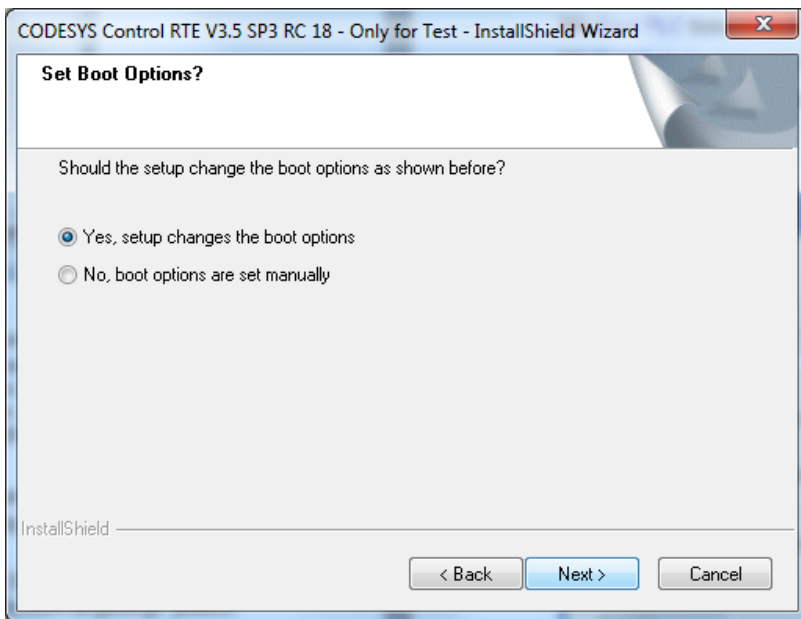

As from V3.5.4.20 there is only one setup for CODESYS Control RTE and CODESYS SoftMotion RTE. You can choose between the two options. The configuration file CODESYSControl.cfg will be adapted accordingly.

If there is already a configuration file from an earlier installation, you also can choose this file. In this case a backup of the configuration file will be created during the running setup. Otherwise the already existing file gets stored.

Switching to SoftMotion also can be done later, manually. For this purpose the following entries must be added to the configuration file CODESYSControl.cfg:


```
[SysTarget]
TargetType=0x1006
DeviceName=CODESYS SoftMotion RTE V3
```

By removing these entries (or by preceding a semicolon) you can get back to the CODESYS Control RTE variant.

Unused cfg-files will be kept in the installation folder under different names.

3 The user interface

Access to the user interface of the CODESYS Control RTE is obtained via an icon in the systray. The tray icon offers the possibility to edit some of the settings in the configuration file.

With a click on the icon of the RTE  a menu is displayed. It consists of the entries


- [Start PLC](#)
- [Stop PLC](#)
- [Exit PLC Control](#)
- [PLC Configuration](#)
- [Remote PLC](#)
- [About...](#)

With [Start PLC](#) resp. [Stop PLC](#) the PLC is loaded respectively unloaded. This is equivalent to turning on/off power on a “real” PLC.

With [Exit PLC Control](#) just the tray icon disappears, the PLC keeps on running.

The [About ...](#) dialog shows the icon and the version of the RTE.

3.1 Remote PLC

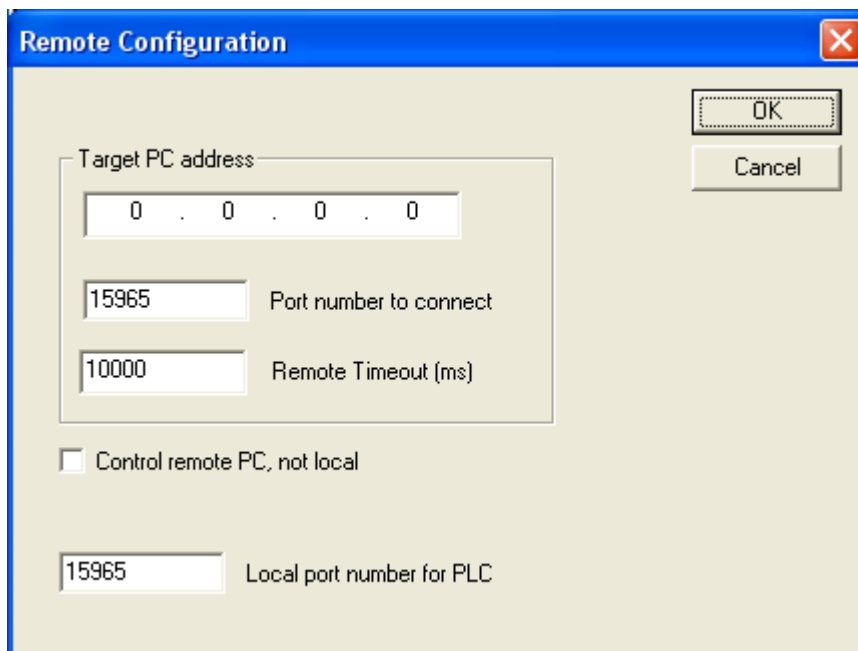


The image shows a 'Remote Configuration' dialog box with a blue title bar and a close button (X) in the top right corner. The dialog contains several input fields and a checkbox. The 'Target PC address' field is a text box containing '0 . 0 . 0 . 0'. Below it are two more text boxes: '15965' for 'Port number to connect' and '10000' for 'Remote Timeout (ms)'. At the bottom, there is a checkbox labeled 'Control remote PC, not local' which is currently unchecked, and another text box containing '15965' for 'Local port number for PLC'. In the top right corner of the dialog, there are 'OK' and 'Cancel' buttons.

With the menu item [Remote PLC](#) a dialog appears to determine whether the local RTE or a remote one shall be configured. The entire configuration done will then affect the locally installed RTE or the one running on the system with the IP-address [Target PC address](#).

3.2 PLC Configuration

With *PLC Configuration* the configuration dialog of the RTE is shown, which allows to view some states and edit some common configuration settings.

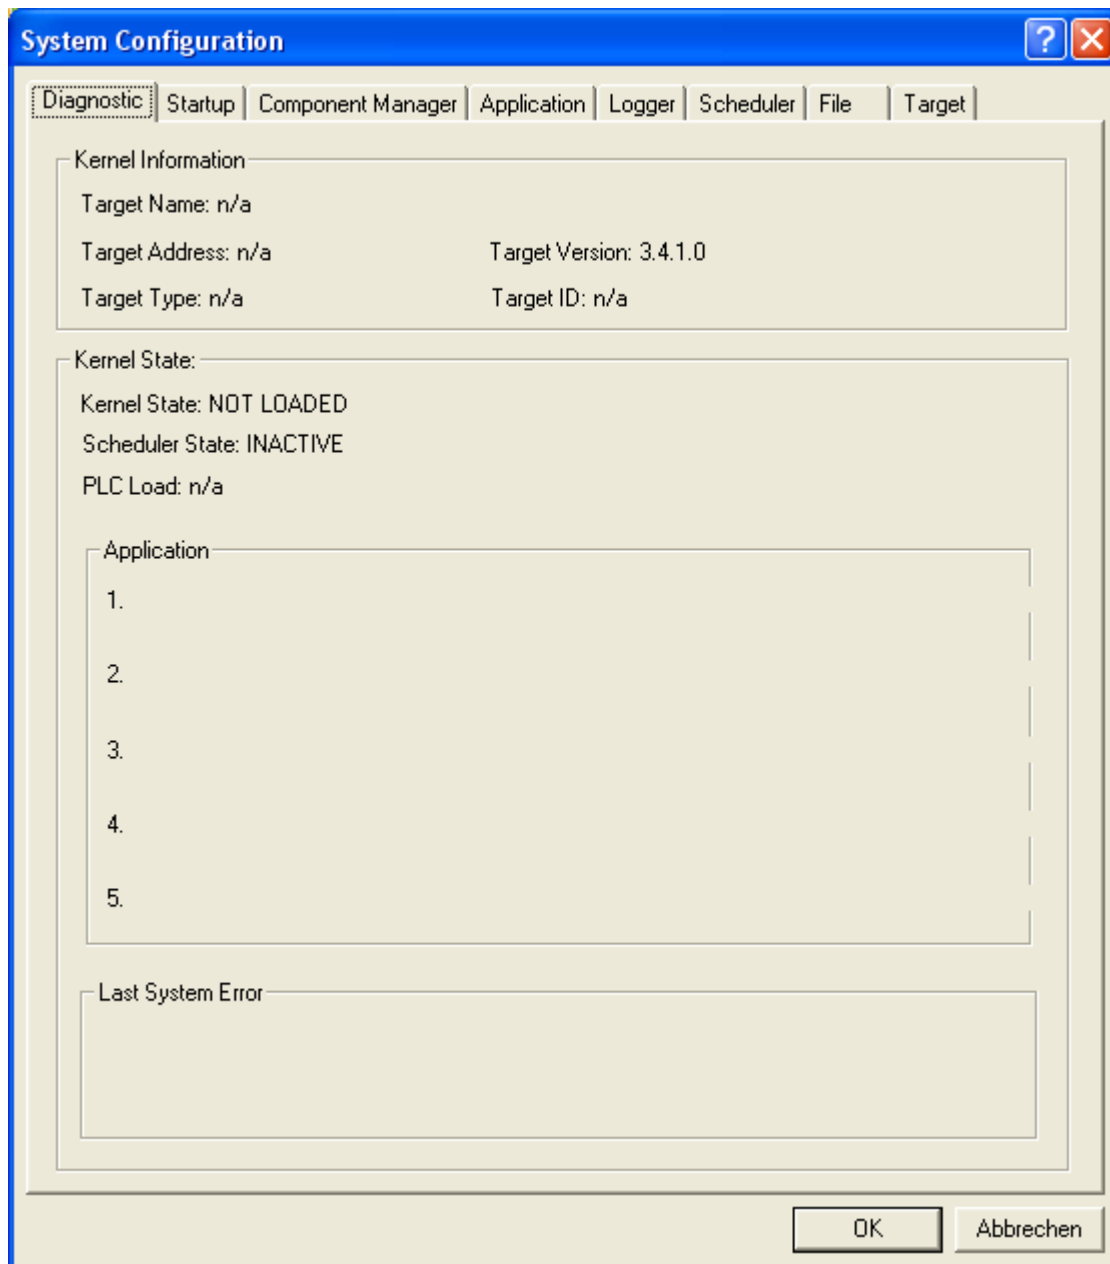

Template: templ_tecdoc_en_V1.0.docx

The dialog appears with the tab *Diagnostic*.

Some states and IDs of the RTE are displayed here.

3.2.1 The tab Startup

In the tab *Startup* three options are available:


- *Start the RTE basic system service when booting:*
Enabling this option leads to an automatic start of the system service („3S RTE Service V3“) of the RTE, no matter if a Windows user is logged on or not.
- *Start the PLC with the basic system service:*
With this option the RTE is loaded (means, the PLC is started) together with the system service. Together with the option above, this leads to a PLC start at boot time of the PC.
- *Do not load boot applications:*
This option prevents loading the boot application automatically. This is sometimes required for test purposes.

3.2.2 The tab Component Manager

This is made for adding dynamic components. Some of the available dynamic components are available in the drop down lists, some have to be entered manually to the lists by typing the name into the edit control.

3.2.3 The tab Application

Some settings for the application component can be edited here.

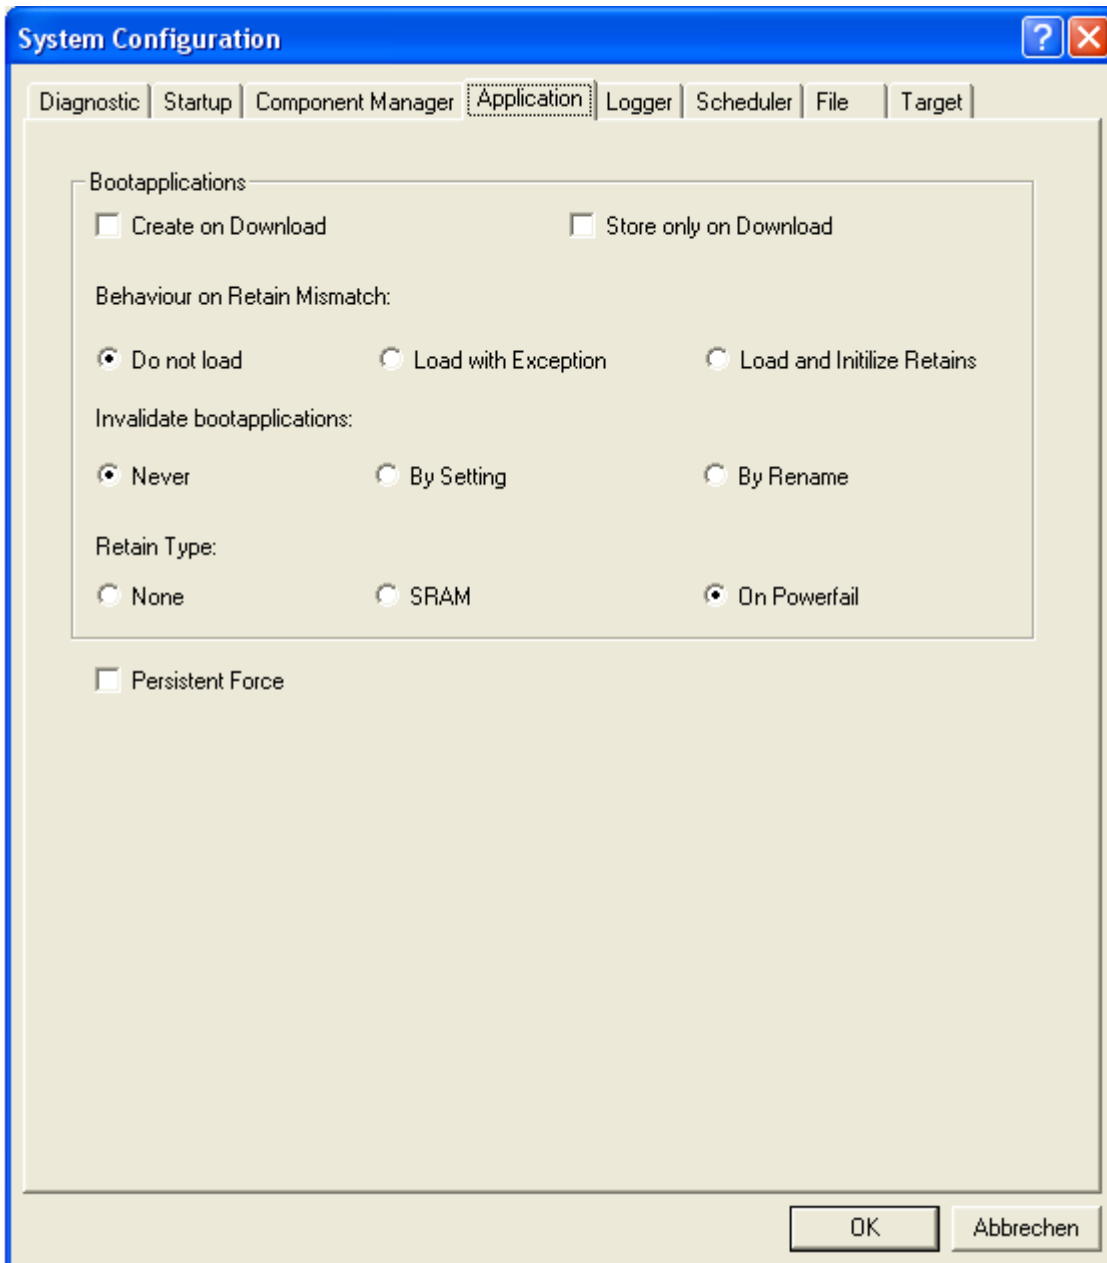

Template: templ_tecdoc_en_V1.0.docx

The options *Create on Download* and *Store only on Download* specify if the boot project is created implicitly on download. The additional option *Store only on Download* leads to not loading the project into memory. With this option enabled, the boot project is stored in the file system only and loaded when the PLC is started the next time.

The options for the handling of corrupt retain data specify how the PLC shall behave in these cases. With *Do not load*, the boot project is not loaded. With option *Load with Exception* the boot project will be loaded but not started. With the option *Load and Initialize Retains* the boot project will run with all retain data being reset to their initialization values.

To make sure the boot project is loaded only in case the PLC terminated correctly the last time, the possibility exists to invalidate the boot project after it has been loaded. The option *Never* prevents this. The option *By Setting* leads to an entry in the configuration file that invalidates the boot project. With the option *By Rename* the app-file will be renamed.

The options under *Retain Type* specify how the RTE stores the retain data. *None* will disable the use of retain data. *SRAM* should not be set by the user directly. As this is hardware dependent, refer the hardware's manual or let an appropriate vendor specific component do this implicitly. The default retain handling of the RTE is *On Powerfail*. In this case the retain data will be saved to a file if the controller is shutdown. To enable this, the system must be equipped with a UPS. Then potential power failures are taken into account, too.


3.2.4 The tab Logger

Logging of log entries to a file is configured here.

Using the default values *5 Files*, *50000 Max File Size*, *1000 Max Entries*, for example, 5 files with a maximum size of 50000 Bytes or 1000 entries are created. The eldest file will then be overwritten. With a number of 0 file, everything is logged to files, no files are overwritten.

3.2.5 The tab Scheduler

The task scheduler within the PLC can also be configured. These entries are necessary in special cases only. You can provide settings here, for example, to prevent some task being no longer scheduled in case other tasks with a higher priority consume all the CPU time. You can also determine how the system should behave in case of such problems.

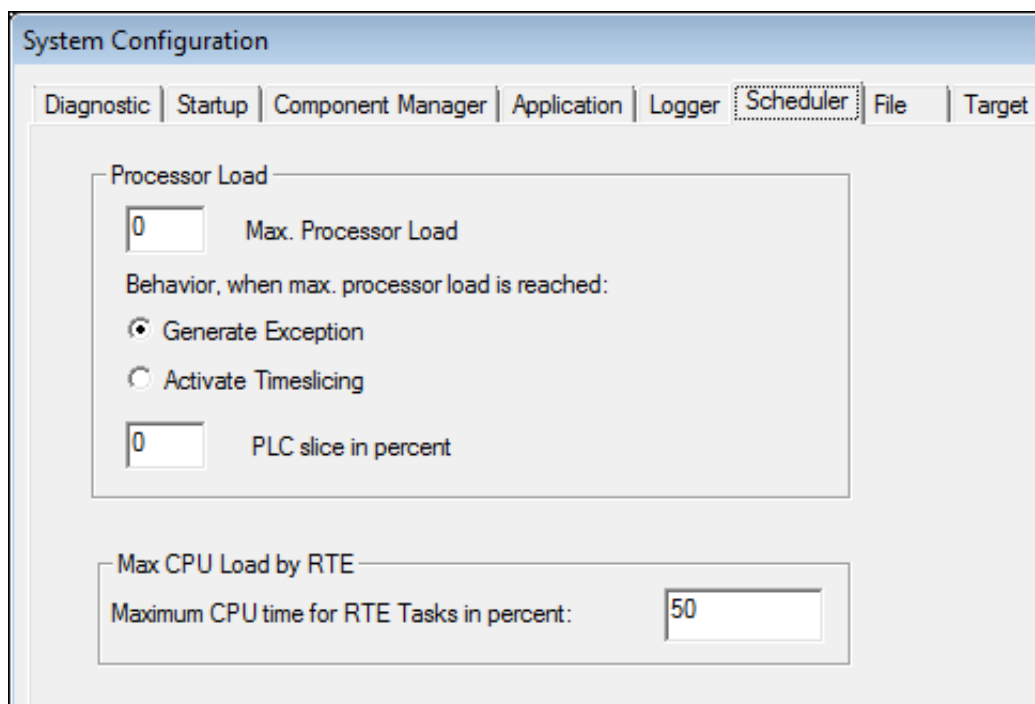

Max CPU Load by RTE: Default value is 50. If you change this value then the entry *MaxPLCTime* in the registry data base is set with the value entered here. This change will result in an adjustment in the CPU timing according to the value. This may be necessary if the RTE task is interrupted too often by Windows system tasks or vice versa.

3.2.6 The tab File

The file system of the PLC offers the feature to store files with a configurable extension to dedicated directories automatically.

3.2.7 The tab Target

By default, the RTE appears with the name of the computer in the PLC scan. The name can be configured here to a fixed name.

4 Available dynamic components

Optional drivers like PCI card drivers for field busses are available as IEC libraries or runtime components, where in case of the RTE these drivers are sys-files. If a driver is a component, it has to be entered to the configuration file, to make the runtime loading it. One can enter this by using the configuration dialog or a text editor.

The configuration file of the RTE is to be found at "C:\Program Files\3S CODESYS\CODESYS Control RTE3\CODESYSControl.cfg" in case of standard installation.

Alternatively, you can also use the Tab [Component Manager](#) to tell the runtime system, which components to load at startup in addition to the RTE.

4.1 The hardware platform adaption

There are mainly two PC platforms available nowadays. The AT compatible, rarely used today and the newer one, the APIC platform. Both platforms are supported by the RTE. The necessary adaption to the platform is contained in the drivers CmpDrvSchedulerAT and -APIC. The setup detects the platform and the driver is entered as "Component.1" into the configuration file by the setup always. This component must not be changed ever.

These drivers store under their name in the registry path of the system services (HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services) in the key [Param](#) their measurements concerning the hardware speed at the first start. On any following system starts, these measurements are used. (In case the values are missing, a new measurement is initiated.)

4.2 CmpSJACanDrv

This driver is a generic driver for SJA1000 based passive CAN cards or on board hardware. The PCI cards by Peak, Ixxat and Automata are supported instantly. When installing such a CAN PCI card, one can use the appropriate driver from W2K_XP_Drivers, a subdirectory in the RTE installation path.

The CmpSJACanDrv can also use on board SJA1000. The properties of such hardware have to be configured in the cfg-file, in the CmpSJACanDrv section. Possible entries are:

```
NumDevices=1 <number of following controllers>
(optional: <DisableRetain=1> You can tell the driver, not to use possibly available
NVRAM as retain memory.)
0.Address=<physical address of the SJA1000>
0.MapAddress=1 <always 1 on a PC>
0.Interrupt=<Interrupt Vector of the SJA1000 >
0.IntEdgeTrig=<0 or 1. 0 hardware dependent>
0.XtalFrequency=<normally 16000000Hz, 24000000Hz is also possible, depends on the
hardware.>
0.BusType=<type of connection of the SJA to the CPU, 1 for ISA, 3 for PCI, 0 for
memory>
0.Alignment=<normally 1, hardwaredependent>
0.Name=<any name>
0.OutputCtrl=<valid values are for example 0xFE, 4C, 1A and others.
Hardwaredependent.>
0.PortAddress=<A portaddress the driver will once on startup write to.>
0.PortValue=<The value to write once on startup.>
```

4.3 CmpEt100Drv

This driver supports Pro100-compatible Intel Ethernet controllers. To use this component, the Windows network driver for this Ethernet controller has to be superseded by the one shipped with the RTE. To manage this, do the following:

- Open the Windows device manager.
- Choose [Update driver](#) from the context menu of the appropriate network card.
- Use [Manual Driver Choice](#) and choose the one in [<RTE-Installationdirectory>\CmpET100MPD](#).

In case the device manager refuses to install the driver, first uninstall the Intel driver and then delete the associated inf file from <SystemRoot>\inf. (SystemRoot is often c:\Windows) (The associated inf files refer to Pro100 and are normally called net557*.inf/pnf or net559*.inf/pnf. The pnf file is called like the inf file and has to be deleted also.) After the following reboot of the system, Windows is no longer able to automatically install the

driver and the hardware wizard will appear. Now the driver from <RTE-Installationdirectory>\CmpET100MPD will be accepted.

4.4 CmpEt1000Drv

The installation of this driver is performed analogue to 4.3, but support Pro1000 compatible Ethernet chipsets by Intel.

4.5 CmpRTL81x9Mpd

This driver supports the Realtek RTL8139 (and compatible) Ethernet controller. The combi-chipsets 8100 and 8110 are included also.

The installation of this driver is performed analogue 4.3 also.

4.6 CmpRTL8169Mpd

Like 4.5, for the Gigabit capable Realtek controller RTL8169 and compatible chipsets, like 8111.

4.7 CmpSercos3Master

This driver supports the SERCOS III PCI card 700353x0 of Automata. After installing the hardware, used the driver from W2K_XP_Drivers\Automata_SERCOS3 directory in the hardware wizard.

4.8 CmpHilscherCIFX

This component supports the CIFX-cards, manufactured by Hilscher.

After the hardware installation use the driver shipped with the card or the SysDrv3S, which comes with the setup of the 3S soft PLC "CODESYS Control V3", the soft-PLC without real time extension by 3S-Smart Software Solutions GmbH. The component has to be entered to the configuration file and additionally needs a section [CmpHilscherCIFX].

The driver needs the entries

```
Device.0.BootloaderFilePath=NXCIF50-RTE.bin  
Device.0.Channel.0.FirmwareFile=cifxdpm.nxf
```

Here in the example, 0 is the zero based index of the card, in case more than one is used. Channel.0 has to be used always for CIFX PCI (or PCIexpress) cards.

The files referenced here normally are shipped with the card and have to be placed in the root file path of the RTE. The names of the files (or the entries in the configuration file) have to be adjusted.

See chapter 0 "

Appendix E: Startup of a PROFIBUS Master by Hilscher CIFS 50-DP(M/S)".

4.9 CmpNetXCanDlDrv

This component is a CAN mini driver, to support the Net-X (or CIFS) CAN cards natively. With this driver, the can interface of the CIFS CAN cards can be used with the 3S CanOpen libraries.

This component can only be used together with the CmpHilscherCIFS component, which is required to perform the firmware download to the card. A CAN firmware (master or slave) is required to make this component work. Then the CAN card is used as a native CAN interface, the protocol is completely managed in the libraries.

The component is configured with the following entries.

```
[CmpNetXCanDlDrv]
MaxNumberOfCanNetworks=0..n-> number of CAN networks (number of NetIds)
NetId.0.Channel=0 -> mapping of the NetId to board and channel of the NetX
-> see CmpHilscherCIFS
NetId.0.Board=0
```

4.10 CmpCX5000Mpd

This driver is a Windows network driver. It can only be used on a Beckhoff PC of type CXxxx,, on which a CX5000 communication processor is available.

When the RTE setup gets executed on a CXxxx, this driver will be installed automatically and get entered in the list of components (in the cfg-file of the RTE).

Additional informationen and manual installation:

On a CX-IPC – basing on the default delivery state, that is with „Windows7 embedded standard“ installed – the Beckhoff driver for the PCI device with the hardware IDs:

- VendorID = SubVendorID = 0x15ec
- DeviceID = SubDeviceID = 0x5000

can be replaced by CmpCX5000Mpd.sys. With the feature „Update driver“ of the Windows system controller this is possible in a simple way (after having installed the RTE):

- Open the [Device Manager](#) von Windows, search the system device of Beckhoff and with the right mouse key select [Update driver](#).
- In the dialogs select option [manually chose device driver](#) and click on [have disk](#).
- Then in the RTE installation folder, in subfolder CmpCX5000Mpd, select the inf-file.
- Respond to any prompts whether you want to install the driver. Then Windows will install a network adapter named „CX5000 driver for CODESYS Ethernet“.

In the configuration file of the RTE (installation folder, file „CodesysControl.cfg“) the driver must be entered manually:

e.g. Component.3=CmpCX5000Mpd

Afterwards a download of a CODESYS project with EtherCAT should no longer show any unresolved references.

Attention: After installation of this driver it is no longer possible to use EtherCAT over the front network connection of the CXxxxx. Reason: For this purpose another SysEthernet driver would have to be used, which however would result in a mixed operation of network drivers. This however is not possible until having fixed CDS-37463.
The internal (extending) connection pin must be used. With a EK1110 also EtherCAT slaves (bus coupler) can be coupled to this internal connection.

5 Appendix

5.1 Appendix A: The registry entries used by the RTE

The behavior of the RTE is partially configurable in the Windows registry database. The following table lists all these values and shows the meanings and the default values. Only a part of these values can be edited using the configuration dialog.

All values are located in [HKEY_LOCAL_MACHINE\SOFTWARE\3S-Smart Software Solutions GmbH\CODSYS SPI3SRTE3](#). (Or in a relative path, if a key is given in front of the name.)

Name	Ttyp	Bedeutung	Default
AutoStartPLC	DWORD	0 or 1: With 1 the PLC will be started automatically by the system service.	0
AllowSetAppConfiguration	DWORD	0 or 1: Sets the write access to the tab Application .	1
AllowSetCMConfiguration	DWORD	0 or 1: <analogue the entry before>	1
AllowSetFileConfiguration	DWORD	0 or 1: < analogue the entry before >	1
AllowSetLoggerConfiguration	DWORD	0 or 1: < analogue the entry before >	1
AllowSetSchedConfiguration	DWORD	0 or 1: < analogue the entry before >	1
AllowSetTargetConfiguration	DWORD	0 or 1: < analogue the entry before >	1
CallBuffersize	DWORD	Size of the buffer for asynchronous calls. (All functions performed by Windows like file services, socket functions ...) The more simultaneous calls an application needs, the bigger this buffer should be, for performance reasons.	65536
CfgFile	STRING	This value points directly to the configuration file of the RTE.	<Installation-path of RTE>
DisablePlcAutoStart	DWORD	This value is used internally by the configuration dialog. It may be edited manually only in case of problems, for example in case the configuration dialog crashed and the variable stays 1 for ever.	0
ShowAppConfiguration	DWORD	0 or 1: Defines if the tab Configuration is shown.	1
ShowCMConfiguration	DWORD	0 or 1: < analogue the entry before >	1
ShowFileConfiguration	DWORD	0 or 1: < analogue the entry before >	1
ShowLoggerConfiguration	DWORD	0 or 1: < analogue the entry before >	1
ShowSchedConfiguration	DWORD	0 or 1: < analogue the entry before >	1
ShowTargetConfiguration	DWORD	0 or 1: < analogue the entry before >	1
LastExit	DWORD	<unused, reserved>	1

Template: templ_tecdoc_en_V1.0.docx

Name	Ttyp	Bedeutung	Default
Path	STRING	This value contains the root path of the RTE file system.	<Installation-path of RTE>
SysTrayLocalPort	DWORD	TCP/IP port, used for the communication between the RTE and the tray icon.	15965
SysTrayRemoteAddr	DWORD	IP address of the remote system to be managed by the tray.	0
SysTrayRemotePort	DWORD	Like SysTrayLocalPort, but for the remote system.	15965
SysTrayUseRemotePLC	DWORD	0 or 1: Defines if the local or the remote PLC is the one to be managed by the tray.	0
KernelVersion	STRING	Version of the RTE, which was started the last time on this PC.	<Version string>
VersionSrv	STRING	Version of the system service of the RTE. Should be the same as the kernel version, may be different just in case of manual patches or hotfixes.	<Version string>
IO Driverpool	KEY	All subkeys in this key are displayed in the Drop-Down-List of the available components in the configuration dialog.	

5.2 Appendix B: Real time behavior on special platforms

The RTE is dependent of the constancy of the CPU frequencies and the clock of the so named front side bus. In the following sections some settings in BIOS and in Windows are listed, which can influence the time behavior of the RTE. Also, methods are presented as one can check real-time behavior.

Note: The RTE runs on the two platforms, AT compatible PC and APIC compatible PC (uni- and multiprocessor). The general adaptation on the specifics of the platforms is done in CmpDrvSchedulerAPIC und –AT. On the APIC platform, as usual on all modern platforms, a complex measurement is carried out to scale the clock frequency in microseconds at first start. The result of the measurement is stored in the Windows registry. See HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\CmpDrvSchedulerAPIC\Params, the values SetClocksPerUS and SetCountsPerMS.
If the values are set, no further measurement is done, when the RTE starts. When the system changes in a way that the clock frequency changes as well, then the values of the measurement have to be deleted. Then at the next start the clock frequency has to be scaled again. Below are described activities like changing of power save settings that lead to the fact that the clock frequency changes

5.2.1 Check BIOS for suspicious settings

As most of all hardware platforms use different kinds of BIOS, we can show a brief overview here only. The mentioned options may be not at all or under a different name available in your BIOS.

- Everything that leads probably to a System Management Interrupt, like a self check of the BIOS, „USB Legacy Device Support“ and other things like that should be disabled. During a system management interrupt the system will not react at all and these interrupts may last some milliseconds (too long for the RTE).
- All energy saving options, like C-States or Intel Speed Step, should be disabled.
- MWAIT, if configurable, should be disabled. A HLT instead is no problem.

5.2.2 Check the settings in Windows

The active power scheme in Windows should be called *Always on*. Any energy saving mechanisms will lead to frequency throttling.

Automatic Updates should be disabled for industrial use. Otherwise the PC may for example reboot when you don't expect it.

5.3 Appendix C: Methods to simply check the real time behavior

- Create a simple project containing a cycle counter. Open the task configuration and set the task cycle to be 1 ms. Run the project on the RTE and check, if the thousands increment once a second. If this is true, the time base is ok. Then check in the monitor tab of the task configuration for the jitter. If the hardware is good, it will range between $\pm 100\mu s$.
- Add the library "SysPort" to your project and trigger a pin of the parallel or serial port. Then watch it with an oscilloscope.
- In case your hardware offers Ethercat support, means an Ethernet chipset supported by the RTE, you can also watch a digital output of an EtherCAT slave with an oscilloscope.
- Of support@3s-software.com one can obtain a project to determine the statistical distribution of jitter times.

5.4 Appendix D: Examples for BIOS configurations

To make the RTE run on different platforms, we had to adapt some BIOS settings in the past. Here some examples are shown. This reflects, what we had to do on some platforms and can only be understood as hints.

5.4.1 CELERON Device

```

Main Advanced Boot Security Power Exit
*****
* System Time      [08:39:34]      * Use [ENTER], [TAB]
* System Date      [Tue 07/06/2010] * or [SHIFT-TAB] to
*                  *****        * select a field.
* BIOS ID         : P915R117      *
* Processor        : Intel(R) Celeron(R) processor
* CPU Frequency    : 1000MHz
* System Memory    : 504MB
* Board Information
* Product Revision : F.3
* Serial Number    : 358666
* BC Firmware Rev. : 134
* HAC Address      : 00:13:95:03:00:04
* Boot Counter     : 143
* Running Time     : 75h
*
* ** Select Screen
* ** Select Item
* +- Change Field
* Tab Select Field
* F1 General Help
* F10 Save and Exit
* ESC Exit
*
*****
v02.58 (C)Copyright 1985-2004, American Megatrends, Inc.

```

5.4.1.1 ACPI Configuration

```

Advanced
*****
* ACPI Settings
* *****
* ACPI Aware O/S      [Yes]      * Enable / disable
*                  *****        * ACPI support for
*                  *****        * operating system.
*
* ACPI 2.0 Features   [No]        *
* Hide AC Device      [No]        *
* ACPI APIC support   [Enabled]    *
* Suspend Mode        [S1 (POS)]  *
* USB Device Wakeup from S3/S4 [Disabled]
*
* Active Cooling Trip Point [Disabled]
* Passive Cooling Trip Point [Disabled]
* Critical Trip Point      [105°C]
*
* Watchdog ACPI Event     [Shutdown]
*
* GPE1 Function           [No Function]
* GPE2 Function           [No Function]
*
*
*****
v02.58 (C)Copyright 1985-2004, American Megatrends, Inc.

```

Template: templ_tecdoc_en_V1.0.docx

5.4.1.2 CPU Settings

```

Advanced
*****
* Configure advanced CPU settings                * When disabled, force *
* Module Version -13.01                         * the XD feature flag to *
* ****                                         * always return 0. *
* ****                                         * ****
* Manufacturer: Intel                           * ****
* Brand String: Intel(R) Celeron(R) M processor * ****
* Frequency :1.00GHz                            * ****
* FSB Speed :400MHz                             * ****
* ****                                         * ****
* Cache L1 :32 KB                               * ****
* Cache L2 :512 KB                              * ****
* ****                                         * ****
* Execute Disable Bit [Enabled]                 * ** Select Screen *
* ****                                         * ** Select Item *
* On Demand Clock Modulation [Disabled]         * +- Change Option *
* C2 State Support [Disabled]                   * F1 General Help *
* ****                                         * F10 Save and Exit *
* ****                                         * ESC Exit *
* ****                                         * ****
*****
v02.58 (C)Copyright 1985-2004, American Megatrends, Inc.  $

```

5.4.1.3 Chipset Settings

```

Advanced
*****
* Advanced Chipset Settings                      * Options *
* ****                                         * ****
* DRAM Frequency [Auto]                        * Auto *
* Memory Hole [Disabled]                       * 400 MHz *
* ****                                         * ****
* IOAPIC [Enabled]                             * ****
* APIC ACPI SCI IRQ [Disabled]                 * ****
* C4 On C3 [Disabled]                          * ****
* DMI Power Management [Disabled]              * ****
* ****                                         * ****
* PCI Express Configuration                    * ****
* Active State Power-Management [Disabled]     * ****
* PCI Express Port 0 [Disabled]                 * ** Select Screen *
* PCI Express Port 1 [Disabled]                 * ** Select Item *
* PCI Express Port 2 [Disabled]                 * +- Change Option *
* PCI Express Port 3 [Disabled]                 * F1 General Help *
* ****                                         * F10 Save and Exit *
* Res. PCIE Hotplug Resources [No]              * ESC Exit *
* ****                                         * ****
*****
v02.58 (C)Copyright 1985-2004, American Megatrends, Inc.  $

```

APIC ACPI SCI IRQ has to be enabled (wrong in this Screenshot!)

5.4.2 INTEL ATOM Device

BIOS Settings

```

Main  Advanced  Boot  Security  Power  Exit
*****
* System Time          [08:23:22]      * Use [ENTER], [TAB]
* System Date          [Tue 07/06/2010] * or [SHIFT-TAB] to
* *****            * select a field.
* BIOS ID       : X270R110
*
* Processor       : Intel(R) Atom(TM) CPU N270
* CPU Frequency   : 1600MHz
*
* System Memory   : 504MB
*
* Board Information
* Product Revision : V.1
* Serial Number    : 406451
* BC Firmware Rev. : 134
* MAC Address      : 00:13:95:04:5E:AA
* Boot Counter     : 177
* Running Time     : 144h
*
*
*
*****
v02.66 (C)Copyright 1985-2009, American Megatrends, Inc.

```

5.4.2.1 ACPI Configuration

```

Advanced
*****
* ACPI Settings          * Enable / Disable
* *****            * ACPI support for
* ACPI Aware O/S         [Yes]      * Operating System.
*
* ACPI Version Features  [ACPI v2.0] * ENABLE: If OS
* ACPI APIC support      [Enabled]    * supports ACPI.
* Suspend mode           [S1 (POS)]   *
* USB Device Wakeup from S3/S4 [Disabled] * DISABLE: If OS
*
* Active Cooling Trip Point [Disabled] * does not support
* Passive Cooling Trip Point [ 90°C]   * ACPI.
* Critical Trip Point      [105°C]
*
* Watchdog ACPI Event     [Shutdown]   * ** Select Screen
*
* GPE1 Function           [No Function] * ** Select Item
* GPE2 Function           [No Function] * + Change Option
*
*
*
*****
v02.66 (C)Copyright 1985-2009, American Megatrends, Inc.

```

5.4.2.2 CPU Settings

```

Advanced
*****
* Configure advanced CPU settings                * Select the revision *
* Module Version:3F.12                          * of the multi processor *
* ****                                           * support interface that *
* Manufacturer: Intel                           * should be offered by *
* Intel(R) Atom(TM) CPU N270 @ 1.60GHz          * the BIOS.            *
* Frequency :1.60GHz                            *                      *
* FSB Speed :532MHz                             *                      *
* Cache L1 :24 KB                              *                      *
* Cache L2 :512 KB                             *                      *
* Ratio Actual Value:12                        *                      *
* ****                                           *                      *
* MPS Revision [1.4]                          *                      *
* ****                                           * ** Select Screen *
* Max CPUID Value Limit [Disabled]             * ** Select Item  *
* Execute-Disable Bit Capability [Enabled]      * * +- Change Option *
* Intel(R) SpeedStep(tm) tech [Disabled]       * * F1 General Help *
* Boot CPU Speed On AC [Maximum]               * * F10 Save and Exit *
* Intel(R) C-STATE tech [Disabled]             * * ESC Exit       *
* ****                                           *                      *
* ****                                           *                      *
*****
v02.66 (C)Copyright 1985-2009, American Megatrends, Inc.

```

5.4.2.3 Chipset Settings


```

Advanced
*****
* Advanced Chipset Settings                      * Options *
* ****                                           * **** *
* DRAM Frequency [Auto]                        * ** Auto *
* Memory Hole [Disabled]                      * ** 400 MHz *
* DIMM Thermal Control [Disabled]             * ** 533 MHz *
* DT in SPD [Disabled]                       * ** *
* TS on DIMM [Disabled]                      * ** *
* ****                                           * **** *
* High Precision Event Timer [Enabled]         * ** *
* HPET Memory Address [FED00000h]             * ** *
* IOAPIC [Enabled]                            * ** *
* APIC ACPI SCI IRQ [Enabled]                 * ** *
* C4 On C3 [Disabled]                        * ** ** Select Screen *
* ****                                           * ** ** Select Item *
* ****                                           * ** +- Change Option *
* PCI Express Configuration                  * ** F1 General Help *
* Active State Power-Management [Disabled]    * ** F10 Save and Exit *
* PCIE Port 0 [Auto]                         * ** ESC Exit *
* PCIE Port 1 [Auto]                         * ** *
* PCIE Port 2 [Auto]                         * ** *
* PCIE Port 3 [Auto]                         * ** *
* ****                                           * **** *
*****
v02.66 (C)Copyright 1985-2009, American Megatrends, Inc.

```


APIC ACPI SCI IRQ has to be enabled!

5.4.2.4 Clock Configuration

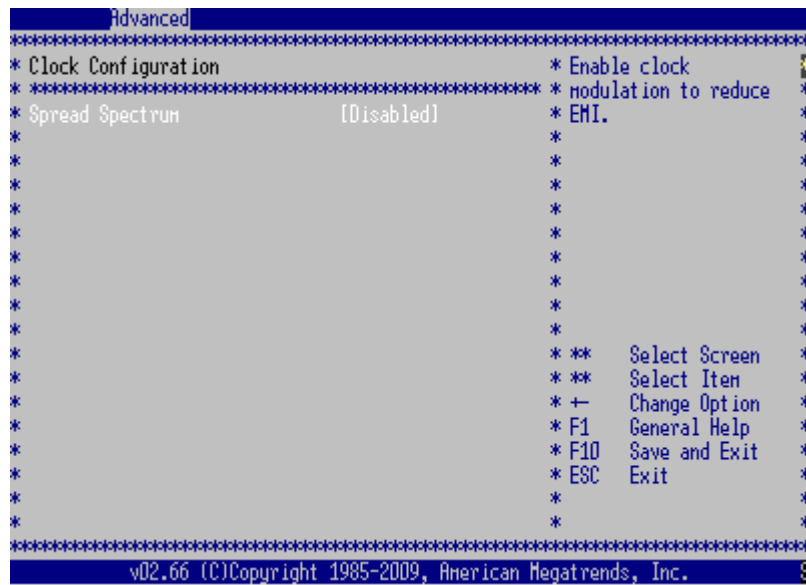

5.4.2.5 USB Configuration

“Legacy USB Support” should be deactivated on most platforms!

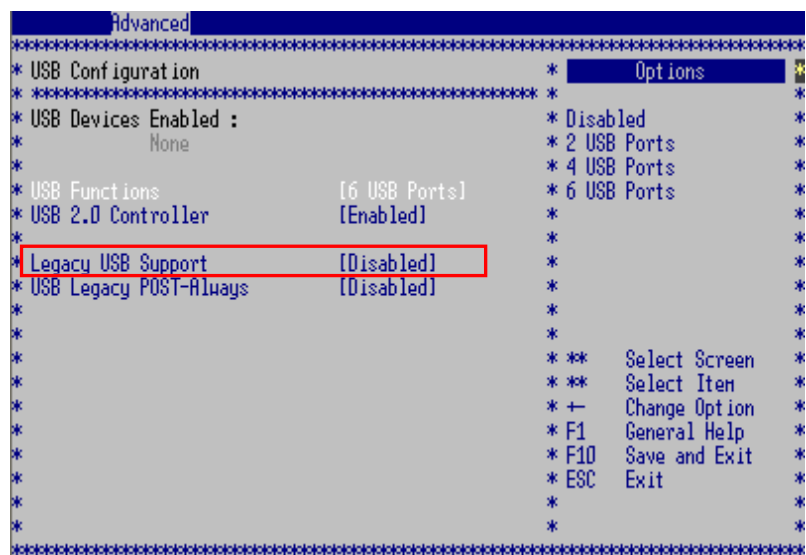

5.4.3 INTEL DUAL CORE Device

BIOS Settings

```

Main Advanced Boot Security Power Exit
*****
* System Time          [07:33:30]      * Use [ENTER], [TAB] *
* System Date         [Fri 07/09/2010] * or [SHIFT-TAB] to *
* *****            * select a field.   *
* BIOS ID             : X945R114      *
* *                   *
* Processor           : Intel(R) Core(TM)2 CPU L7400 *
* CPU Frequency       : 1000MHz        *
* *                   *
* System Memory       : 1016MB         *
* *                   *
* Board Information   *
* Product Revision    : D.1            *
* Serial Number       : 251294         *
* BC Firmware Rev.    : 134            *
* MAC Address         : 00:13:95:02:94:97 *
* Boot Counter        : 188            *
* Running Time        : 63h            *
* *                   *
* *                   *
* *                   *
*****
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

```

5.4.3.1 ACPI Configuration

```

Advanced
*****
* ACPI Settings        * Enable / Disable *
* *****            *
* ACPI Aware O/S       [Yes]      * ACPI support for *
* *                   * Operating System. *
* *                   *
* ACPI Version Features [ACPI v2.0] *
* ACPI APIC support     [Enabled]   *
* Suspend mode          [S1 (POS)]  *
* USB Device Wakeup from S3/S4 [Disabled] *
* *                   *
* Active Cooling Trip Point [Disabled] *
* *                   *
* Passive Cooling Trip Point [ 90°C] *
* Critical Trip Point      [105°C]  *
* *                   *
* Watchdog ACPI Event     [Shutdown] *
* *                   *
* GPE1 Function           [No Function] *
* GPE2 Function           [No Function] *
* *                   *
* *                   *
* *                   *
*****
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

```

5.4.3.2 CPU Settings

```

Advanced
*****
* Configure advanced CPU settings                ** Select the revision
* Module Version -13.04                        ** of the multi processor
* **** support interface that
* Manufacturer: Intel                          ** should be offered by
* Brand String: Intel(R) Core(TM)2 CPU         L7400 ** the BIOS.
* Frequency :1.00GHz                          **
* FSB Speed :667MHz                          **
*
* Cache L1 :64 KB                            **
* Cache L2 :4096 KB                         **
*
* MPS Revision [1.4]                        ** ** Select Screen
*
* Max CPUID Value Limit [Disabled]          ** ** Select Item
* Execute Disable Bit [Enabled]             ** + Change Option
* Core Multi-Processing [Enabled]           ** F1 General Help
* Intel(R) SpeedStep(tm) tech. [Disabled]   ** F10 Save and Exit
* C1 Config. [Standard]                    ** ESC Exit
* C2 Config. [Disabled]                    **
*****
v02.59 (C)Copyright 1985-2005, American Megatrends, Inc.

```

5.4.3.3 Chipset Settings

```


Advanced
*****
* Advanced Chipset Settings                    ** Options
* ****
* DRAM Frequency (Auto)                      ** Auto
* Memory Hole (Disabled)                     ** 400 MHz
* DIMM Thermal Control (Disabled)            ** 533 MHz
* DT in SPD (Disabled)                       **
* TS on DIMM (Disabled)                      **
*
* High Precision Event Timer (Enabled)        **
* HPET Memory Address (FE000000h)            **
* IOAPIC (Enabled)                           **
* APIC ACPI SCI IRQ (Enabled)                **
* C4 On C3 (Disabled)                        ** ** Select Screen
*
* PCI Express Configuration                  ** ** Select Item
* Active State Power-Management (Disabled)   ** + Change Option
* PCIE Port 0 (Auto)                         ** F1 General Help
* PCIE Port 1 (Auto)                         ** F10 Save and Exit
* PCIE Port 2 (Auto)                         ** ESC Exit
* PCIE Port 3 (Auto)                         **
*****

```

APIC ACPI SCI IRQ unbedingt enablen!

5.4.3.4 USB Configuration

Disable USB Legacy support.

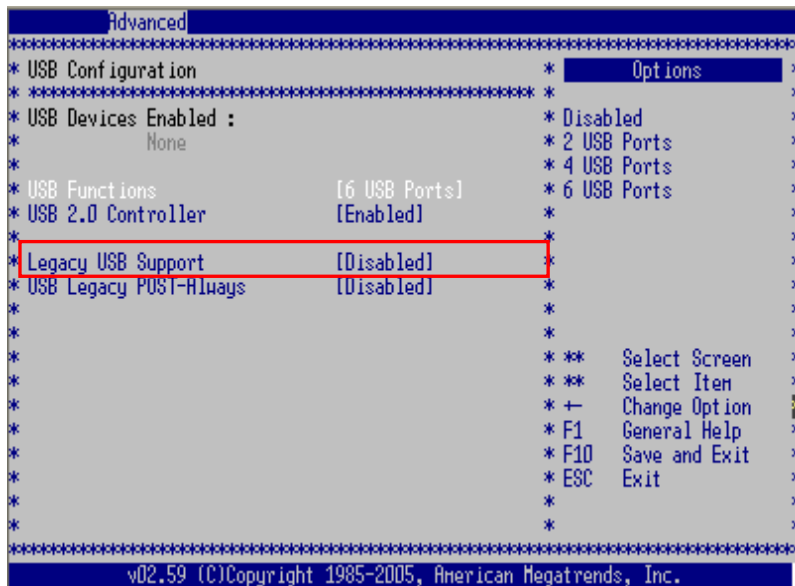

5.4.4 More common hints on hardware configuration

C-states play an important role in energy saving. But the higher the number behind the C-state, the more time it may take to wake up the processor. If it is not possible to disable these states in the BIOS, there are tools available in the internet, to maintain these things at runtime of Windows.

These tools are for example (just as hints, we did not test them nor do we recommend the use):

- RightMark CPU
- CPU-Z (CPUID)
- RM Clock
- And others ...

Speedstep of INTEL or PowerNow of AMD have to be disabled, if possible, in any case.

In case none of the above actions leads to a good time behavior of the RTE, please contact the support of 3S Smart Software Solutions. It also can be necessary to send the hardware for time analysis to us.

5.5 Appendix E: Startup of a PROFIBUS Master by Hilscher CIFX 50-DP(M/S)

In the following the installation of a PROFIBUS-DP network controller with CODESYS Control RTE is described step by step. This card is equipped with the network controller NetX and the startup of any card with NetX technology is analogously.

5.5.1 Installation of a Windows driver

If you want to use the card with the runtime system CODESYS Control RTE, do not install the Hilscher drivers for the NetX cards, which are delivered by Hilscher. If you want to use the CODESYS Control RTE V3 with NetX, you have to install **WdmGeneric.sys** driver shipped with the card or **SysDrv3s.sys**. In case of standard installation the files are located in "C:\Programme\3S CODESYS\CODESYS Control RTE3\SysDrv3S" resp. "C:\Program Files\3S CODESYS\CODESYS Control RTE3\SysDrv3S".

The RTE does not need a specific driver. You can even install no driver for the card. The most important thing is that the installed driver is passive. If you install an active driver, you will discover a lot of problems.

5.5.2 Copy NetX firmware and NetX boot loader

Copy NetX firmware and NetX boot loader to the CODESYS runtime system folder „C:\Program Files\3S CODESYS\CODESYS Control RTE3“.

5.5.3 Configure the RTE in "CODESYSControl.cfg"

Edit „CODESYSControl.cfg“ located in the CODESYS runtime system folder and add the component CmpHilscherCifX:

```
[ComponentManager]
Component.x=CmpHilscherCIFX
```

The RTE loads the most components statically, so CODESYS Control Win V3 has much more component entries than CODESYS Control RTE V3.

Add a section for the CmpHilscherCIFX to specify path and filename of the NetX firmware and the bootloader.

```
...
[CmpHilscherCIFX]
TraceLevel=0xFFFFFFFF
Device.0.BootloaderFilePath=NXCIF50-RTE.bin
Device.0.Channel.0.FirmwareFile=cifxdpm.nxf
...
```

TraceLevel: This entry activates additional debug printouts in the CODESYS logger (dialog 'Log' in the device editor) or in the log files ("PlcLog.csv" or "PlcLog_x.csv").

Device.X.BootloaderFilePath: Specify the file path and filename of the NetX bootloader for each NetX controller. The relative path starts in the installation folder but absolute paths can be used as well. If more than one NetX controllers are used, more than one file paths must be specified.

```
...
Device.0.BootloaderFilePath=NXCIF50-RTE.bin
Device.1.BootloaderFilePath=NXCIF50-RTE.bin
...
```

Device.X.Channel.X.FirmwareFile: Specify the file path and filename of the netX firmware for each netX and each channel. The relative path starts in the installation folder but absolute paths can be used as well. Most of the time channel 0 is used only. If more than one netX chips are used, more than one file paths must be specified.

```
...
Device.0.Channel.0.FirmwareFile=cifxdpm.nxf
Device.1.Channel.0.FirmwareFile=cifxdpm.nxf
...
```



This CFG file located in "C:\Programme\3S CODESYS\CODESYS Control RTE3\" configures one CIFX 50-DP(M/S) card for use with a RTE runtime system.

5.5.4 Start runtime

Start the RTE runtime system by use of 'Start PLC' in the SysTray menu of the RTE. If the runtime is started, there must be logger entries in the runtime logger for CmpHilscherCIFX.

- The CmpHilscherCIFX component must be loaded
- The CmpHilscherCIFX component tells you the toolkit version (often asked by the Hilscher support)
- The firmware is loaded now. The logger tells you the name and the version of the firmware (also often asked by the Hilscher support).
- If the TraceLevel is set to 0xFFFFFFFF, the CmpHilscherCIFX prints out channel information for every configured NetX channel.

The logger entries are stored in LogPLCxx.csv located in the RTE directory or can be displayed in dialog 'Log' of the device editor in the programming system.


0 warning(s) 0 error(s) 0 exception(s) 183 information(s) <All components> Logger: <Default logger>			
Severity	Time Stamp	Description	Component
i	26.10.2011 07:36:8:0	Slot/Board: <slot>0</slot>, Channel=<channel>0</channel>: <name>PROFIBUS DP Master...	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	No warm start parameter found or available!	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Device successfully created for channel = 0	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	-----	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	I/O Input Subblock found (Channel=0, Block=8, Offset=0x00000EC0, Len=0x0040)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	I/O Output Subblock found (Channel=0, Block=7, Offset=0x00000E80, Len=0x0040)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	I/O Input Subblock found (Channel=0, Block=6, Offset=0x00002680, Len=0x1680)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	I/O Output Subblock found (Channel=0, Block=5, Offset=0x00001000, Len=0x1680)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Input Mailbox found (Channel=0, Block=4, Offset=0x00000840, Len=0x0640)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Output Mailbox found (Channel=0, Block=3, Offset=0x00000200, Len=0x0640)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Extended Status block found (Channel=0, Block=2, Offset=0x00000050, Len=0x01B0)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Common Status block found (Channel=0, Block=1, Offset=0x00000010, Len=0x0040)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Control block found (Channel=0, Block=0, Offset=0x00000008, Len=0x0008)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	-----	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	Reading Channel Info on Channel#0 (DPM Start Offset=0x00000300 Length=0x00003D00)	CmpHilscherCIFX
i	26.10.2011 07:36:8:0	System channel is READY!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Configuration download, checking / starting: CHANNEL#5, 0 file(s)!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Configuration download, checking / starting: CHANNEL#4, 0 file(s)!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Configuration download, checking / starting: CHANNEL#3, 0 file(s)!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Configuration download, checking / starting: CHANNEL#2, 0 file(s)!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Configuration download, checking / starting: CHANNEL#1, 0 file(s)!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Configuration download, checking / starting: CHANNEL#0, 0 file(s)!	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Firmware download, checking / starting: CHANNEL #5, 0 file(s)	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Firmware download, checking / starting: CHANNEL #4, 0 file(s)	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Firmware download, checking / starting: CHANNEL #3, 0 file(s)	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Firmware download, checking / starting: CHANNEL #2, 0 file(s)	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Firmware download, checking / starting: CHANNEL #1, 0 file(s)	CmpHilscherCIFX
i	26.10.2011 07:36:7:0	Successfully downloaded the firmware to device 'cifxdpm.nxf'!	CmpHilscherCIFX
i	26.10.2011 07:35:59:0	Firmware download, checking / starting: CHANNEL #0, 1 file(s)	CmpHilscherCIFX
i	26.10.2011 07:35:59:0	Bootloader was downloaded and started successfully!	CmpHilscherCIFX
i	26.10.2011 07:35:59:0	Downloading bootloader 'NXCIF50-RTE.bin'	CmpHilscherCIFX
i	26.10.2011 07:35:58:0	New RAM based device found, device will be reset!	CmpHilscherCIFX
i	26.10.2011 07:35:58:0	cifX Toolkit V0.950	CmpHilscherCIFX

Logger entires in CODESYS, dialog 'log' of the device editor.


5.5.5 Create CODESYS project with IO configuration

Now you are able to create a simple application with a running field bus:


1. Create a new standard project
2. Add device CODESYS Control RTE V3.

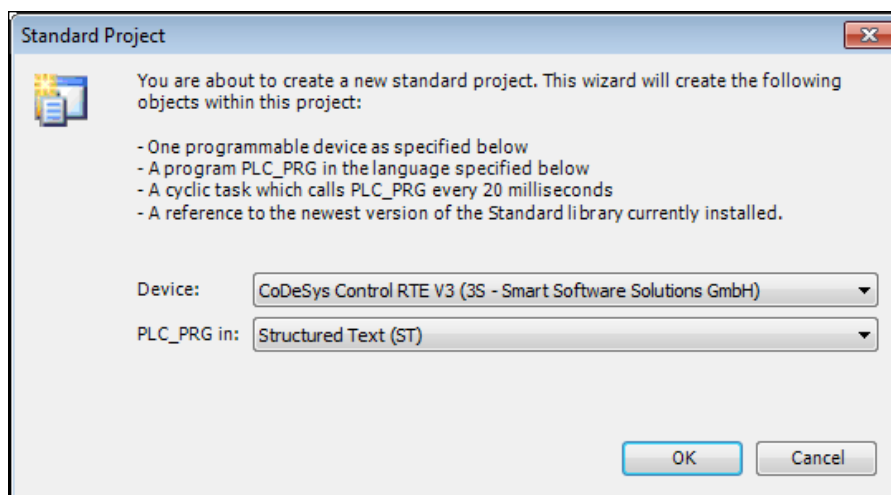


3. Add fieldbus master CIFX_PB.

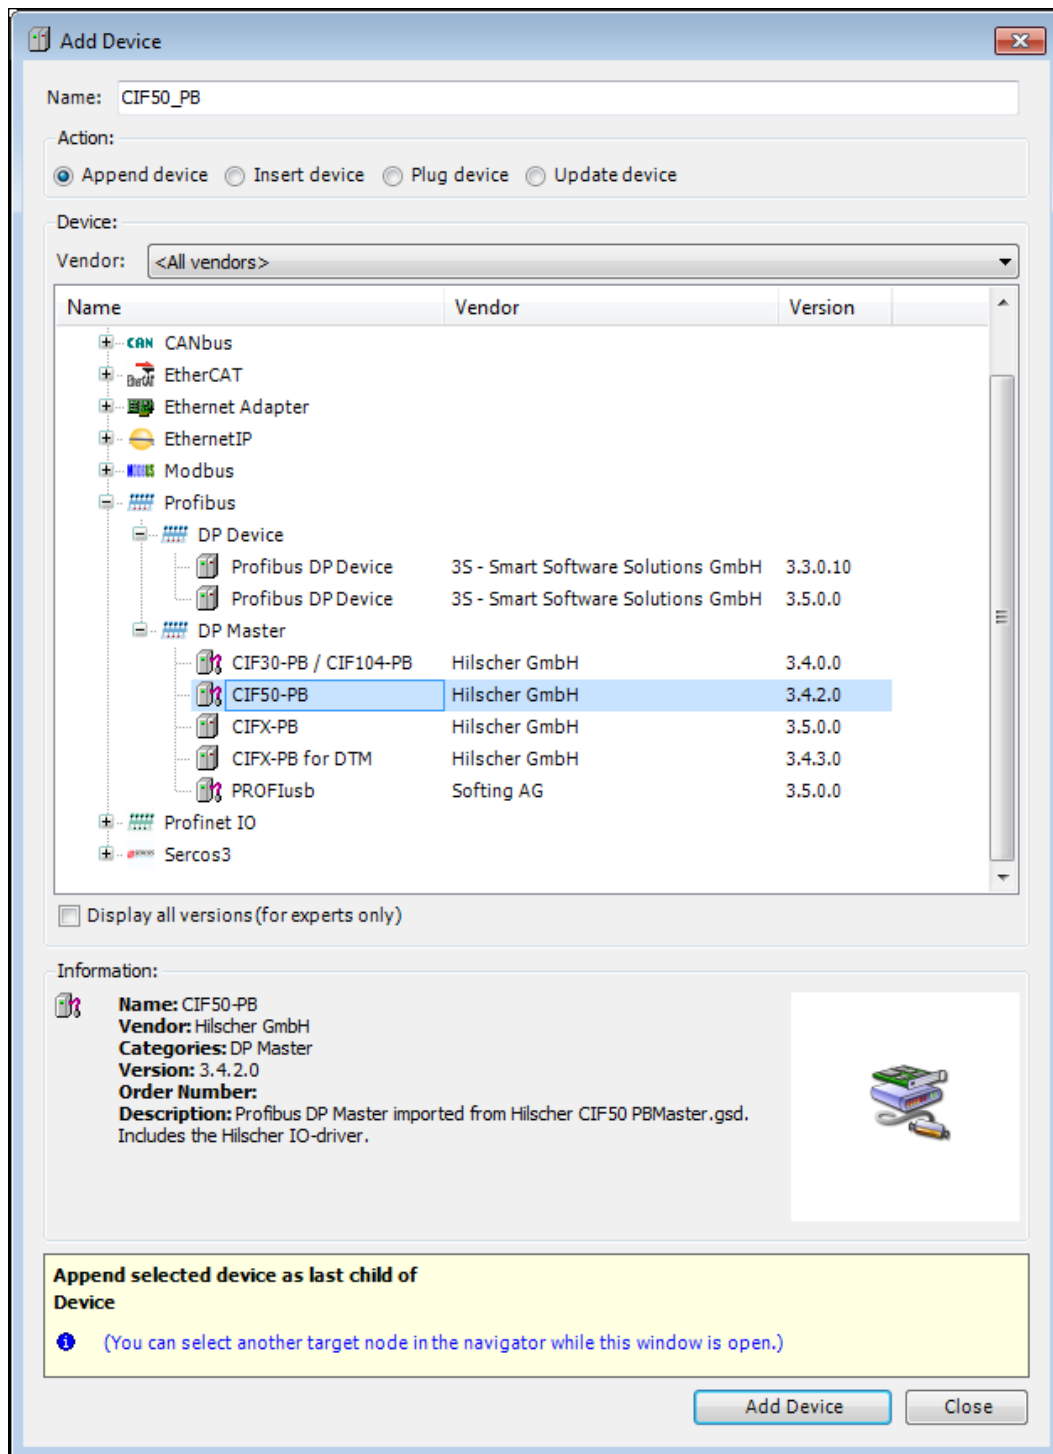

- Open the fieldbus master configuration dialog by double-click on the node in the device tree and switch to the tab 'NetX configuration'. There, set 'Slot' and 'NetX Com Channel' in a way they are identical to the device number in the configuration file „CODESYSControl.cfg“. Compare the value with the entire in the logger of the runtime system.

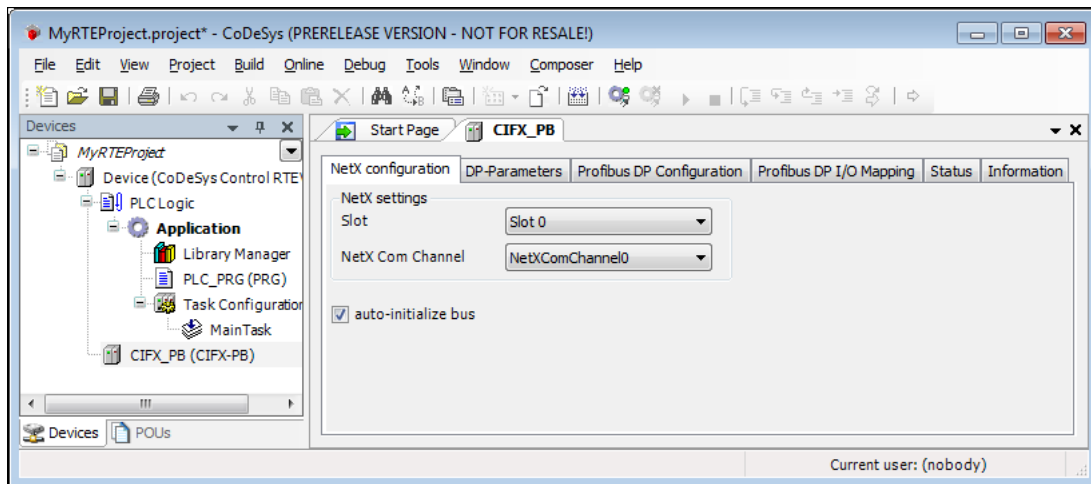

- If you build the application, download it and go online, then any node in the device tree must be green.

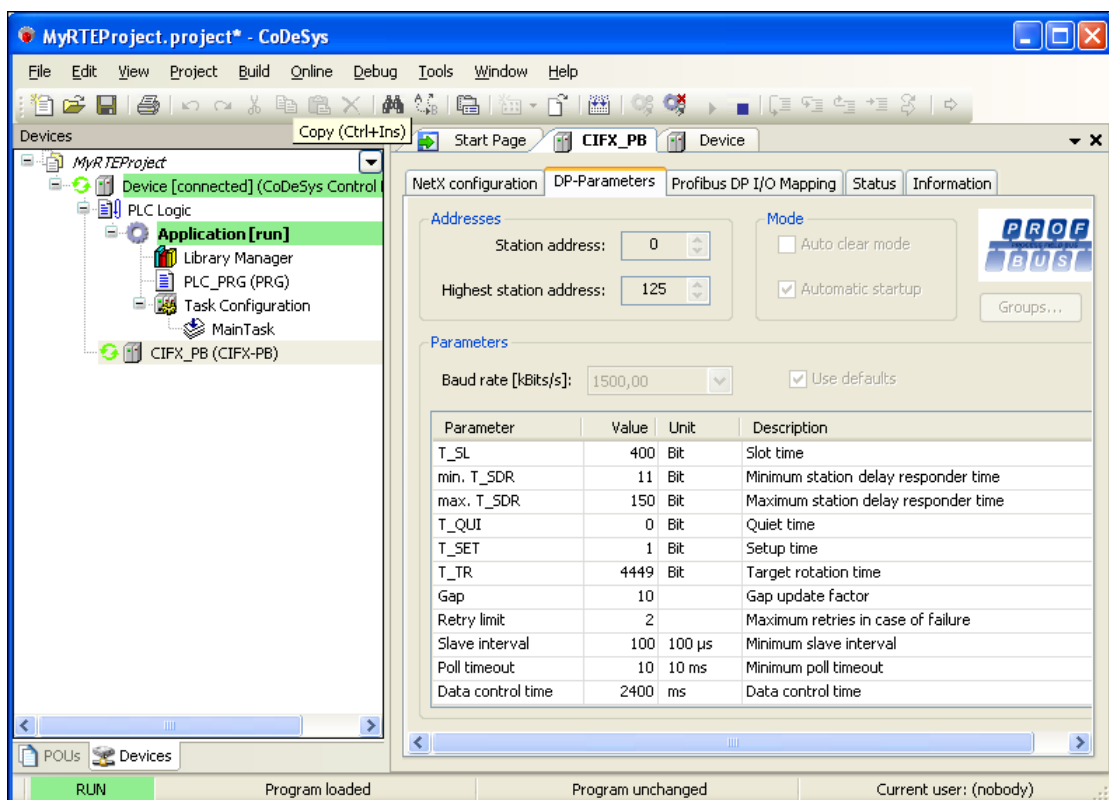

5.5.6 FAQ

5.5.6.1 If the fieldbus master is not green, how can I find the problem?

Open the configuration dialog of the PLC (in this dialog you can find the communication settings, too), switch to the tab 'Logger' and click the green arrows. CODESYS uploads all log entries. Now you can look for errors and exceptions.

5.5.6.2 There are unresolved references

If there are unresolved references in the program, a runtime system component is not loaded or a wrong version of it is not loaded. Please check the CODESYS logger. The component CmpHilscherCIFS must be loaded.

If it is not loaded, please add it to the CODESYSControl.cfg file.

If it is loaded, it is possible to have got an old version of it. Please update the whole runtime system.

5.5.6.3 I've activated the Trace, but I do not see a new entry of the CmpHilscherCIFS component

If the TraceLevel is activated, but you do not see a new entry of the CmpHilscherCIFS, the runtime system does not find the NetX card/chip at all. Please check, if the card is plugged in correctly and if you have installed the correct driver. See chapter 5.5.1 "Installation of a Windows driver".

Bibliography

- [1] Communication System NG Spec, 3S-Smart Software Solutions, 2004, V0.5
- [2] Runtime System 3.0, 3S-Smart

Change History

Version	Description	Author	Date
0.1	HW Configuration Tips from ES added.	AF	28.7.2010
0.2	Review	RW	15.09.2010
0.3	Update according to review comments and review from AF thereof CDS-12397	AS	07.10.2010
1.0	Release after formal review	MN	21.10.2010
1.1	CDS-22297: NetX Example	AS	02.05.2011
1.2	Review	ESch	06.05.2011
1.3	CDS-22893 Ch. 3.2.5: "Max CPU Load by RTE"	AS	06.06.2011
1.3	Review	AF	06.06.2011
2.0	Release after formal review	MN	13.06.2011
2.1	Extension of chap.2 Appendix E, 5.5	AS	26.10.2011
2.2	Review	ESch	25.11.2011
3.0	Release after formal review	AS	25.11.2011
3.1	CDS-29303	MN	17.09.2012
3.2	Security note added in Chap.1	TZ	30.10.2012
4.0	Release after formal review	MN	29.11.2012
5.0	Freigabe nach formalem Review	MN	15.03.2013
5.1	CDS-35791 (new doc template), CDS-37998 (chap. 2, Note)	MN	07.02.2013
5.2	CDS-38036 Setup description extended	SM	14.02.2014
5.3	CDS-38036 Review and minor correction	AF	14.02.2014
6.0	Release after formal review	MN	17.02.2014
6.1	CDS-38155: chap 4.10	MN	26.02.2014
6.2	CDS-38155: Review	AF	20.03.2014
7.0	Release after formal review	MN	20.03.2014

Template: templ_tecdoc_en_V1.0.docx